

# How to put together a Gate Kit



Take bolt and wires out of the Insulator End and using the 3 larger screws secure to post. Ensure the plastic base is up the right way, the top has a plastic square piece to hold the bolt in place. Put the insulator back together




Thread the tape like you would a belt, through both wires and back through one.



Screw the Gate Latch to the other side of the gateway using the 4mm smaller screws



Put the gate handle into the gate latch and measure the tape across, thread the tape through the slots on the Gate Link and ensure the tape is tight, hook onto the other end of the handle and adjust as necessary. Check your tape has no twists and is sitting properly. Using pliers squeeze the gap shut so that the Gate Link doesn't come off.

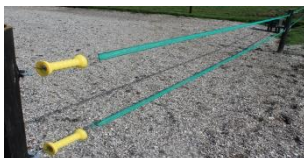

To electrify your gateway, run your cable up the post on the latch side, strip the top plastic off and make a loop put the wire between the washers and nuts and screw up tightly. This will ensure your gate is not live once opened.